

---

# **USER MANUAL**

## **WB420**

---

---



## **Warning**

- This manual is a necessary part of the product. Please read carefully.
- Keep the manual for later use when maintaining the machine.
- This machine can only be used for the designated purposes. Never use it for any other purpose.
- The manufacturer is not responsible for the damage incurred by improper use or use other than the intended purpose.

## **Precaution**

- The equipment can only be operated by qualified personnel with special training. Modification to any components or parts, or use the machine for other purpose without either obtaining the agreement from the producer, or observing the requirement of the instructions may lead to direct or indirect damage to the equipment.
  - ★ The equipment should be installed on the stable ground, not wooden pallet, otherwise not accurate.
- Keep the back panel 0.6M away from the wall for good ventilation. Enough room should be left on both sides for convenient operation.
- Do not put the equipment a place with high temperature or moisture, or near the heating system, water tap, air-humidifier or chimney.
- Avoid lots of dust, ammonia, alcohol, thinner or spraying binder.
- People who are no operating the machines should be kept away when it is used.
- Use appropriate equipment and tools, protective and safety equipment, including eyeglasses, earplugs and working boots.
- Pay special attention to the marks on the machine.
- Do not touch or approach the moving parts by hand during operating.
- Do not remove the safety device or keep it from working properly.

---

## Contents

|                                                 |    |
|-------------------------------------------------|----|
| 1. General-----                                 | 1  |
| 2. Machine assembly-----                        | 1  |
| 3. Controls and components-----                 | 3  |
| 4. Indication and use of wheel balancer-----    | 6  |
| 5. Self-calibration of wheel balancer -----     | 10 |
| 6. Errors-----                                  | 11 |
| 7. Self- diagnoses-----                         | 12 |
| 8. Setting machine-----                         | 12 |
| 9. OPT function -----                           | 13 |
| 10. Spare parts list and Exploded drawings----- | 15 |

# 1. General

## 1.1. Technical data:

- Max wheel weight: 65kg
- Power: 0.25kw
- Power supply: 220v; 50-60hz
- Balancing accuracy:  $\pm 1g$
- 8 balancing modes: DYN, ALU1, ALU2, ALU3, ALU4,ALU5,ALUS, ST
- Balancing speed: 200r/min
- Cycle time: 8s
- Rim diameter: 10 " ~ 24 " (256mm~610mm)
- Sound pressure level during work cycle: <70db
- 

## 1.2. Features:

- Statistic and dynamic balancing, ALU-programs for alloy rims or special shaped
- ALU balancing mode may choose 6 o'clock or 12 o'clock position to add weight
- Self diagnoses, easy to find the problem
- Apply to steel and aluminum alloy rim

## 1.3. Working environment:


- Temperature: 5~50°C
- Height:  $\leq 4000m$

# 2. Machine assembly

## 2.1. Unpack


Unpack the carton, check if missing any spare parts.

| No. | Item               | Qty |
|-----|--------------------|-----|
| 1   | Width gauge        | 1   |
| 2   | Conic No.1         | 1   |
|     | Conic No.2         | 1   |
|     | Conic No.3         | 1   |
|     | Conic No.4         | 1   |
| 3   | Quick relase nut   | 1   |
| 4   | Thread hub         | 1   |
| 5   | Bowl for quick nut | 1   |
| 6   | Pad for bowl       | 1   |
| 7   | Balancing hammer   | 1   |
| 8   | 100g weight        | 1   |
| 9   | Allen wrench       | 1   |

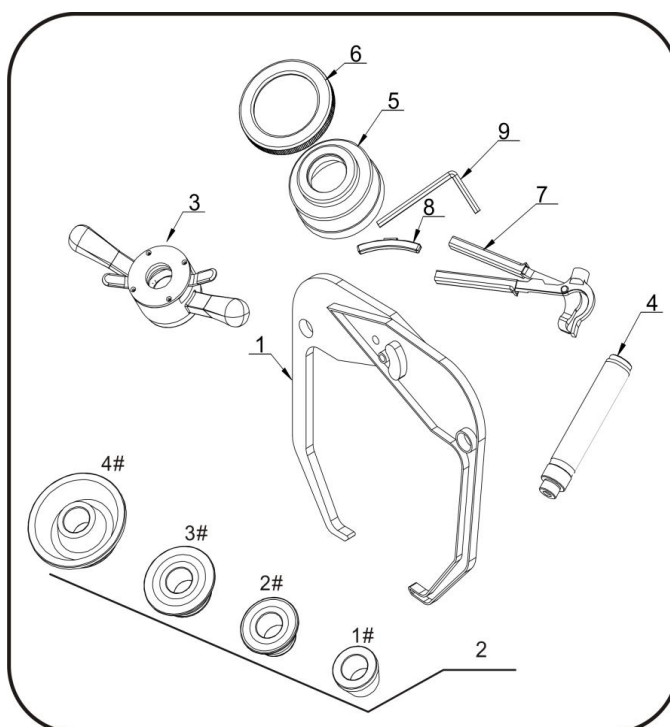

## 2.2. Install


- The equipment should be installed on the stable ground, not wooden pallet, otherwise not accurate.
- Keep the back panel 0.6M away from the wall for good ventilation. Enough room should be left on both sides for convenient operation.

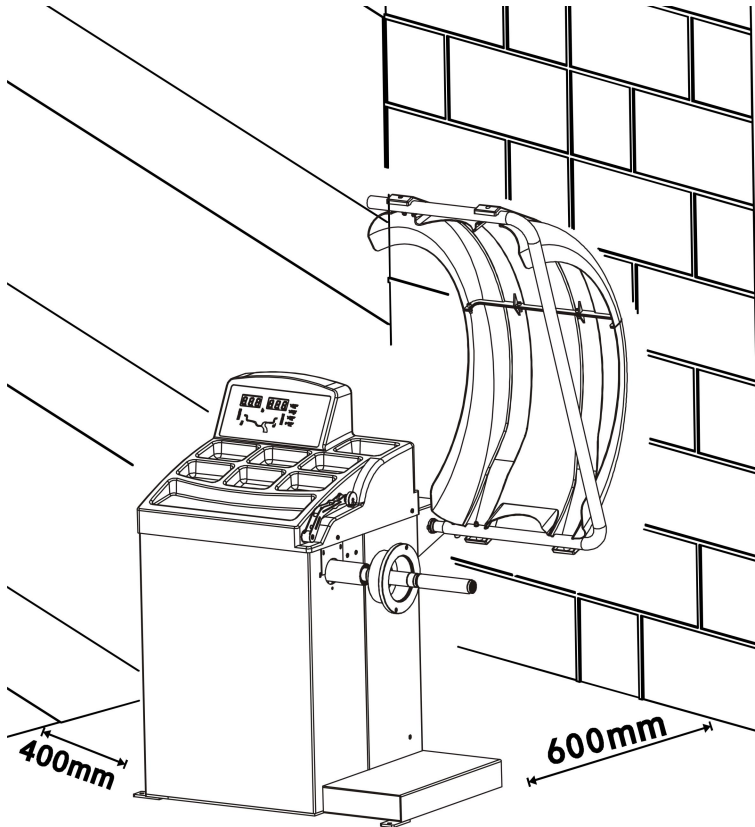

2.3. Fix balancer to floor with screws on the bottom.

2.4. Install adaptor

The wheel balancer is supplied complete with cone type adaptor for fastening wheel with central bore. (see below picture)

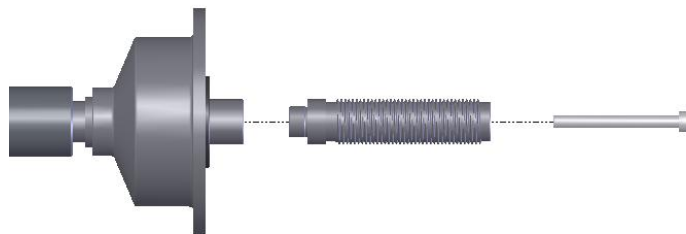


2.5. Install wheel

Clean wheel, take off counterweights, check pressure of wheel.

Choose the way of installation according to the type of wheel.



Main shaft—wheel—  
suitable cone( small head towards inside)—quick handle nut

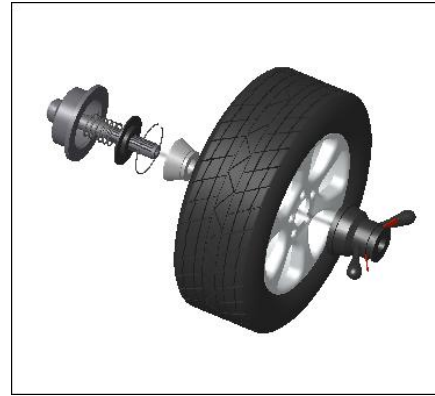


Main shaft—suitable cone(big head towards inside)  
—wheel—quick handle nut


**Attention:** May add a wheel, and hold the wheel to help install the thread hub. When installing or taking off wheel, do not let wheel move on the shaft, to avoid scratching shaft.

### 3. Controls and components

| No. | Item                | Standard/Optional |
|-----|---------------------|-------------------|
| A   | Switch              | S                 |
| B   | Head with tool tray | S                 |
| C   | Gauge head          | S                 |
| D   | Main shaft          | S                 |
| E   | Pedal breaker       | O                 |
| F   | Safe guard          | S                 |
| G   | Key board           | S                 |

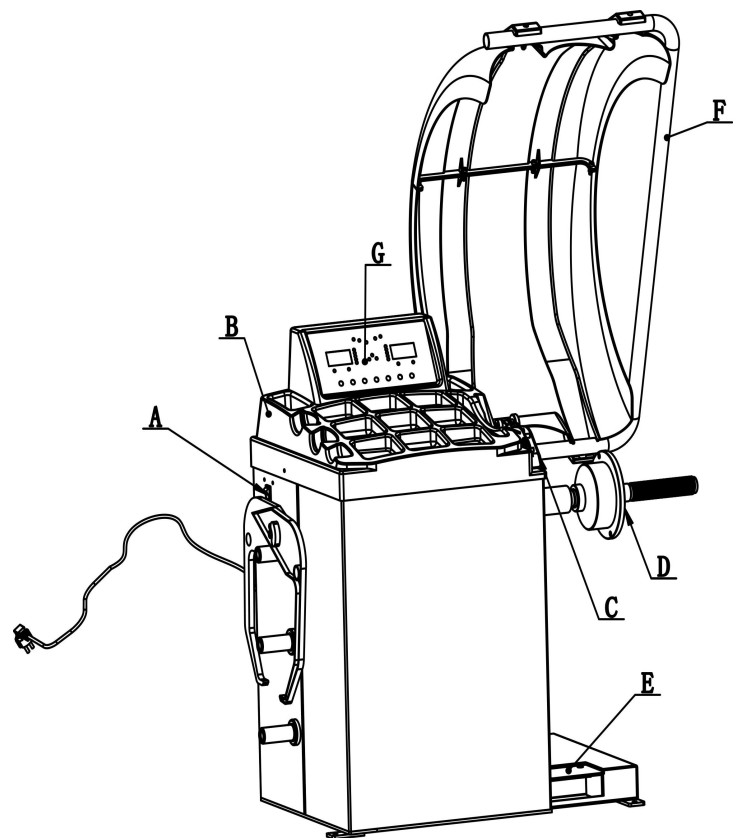



## Display plate (G)

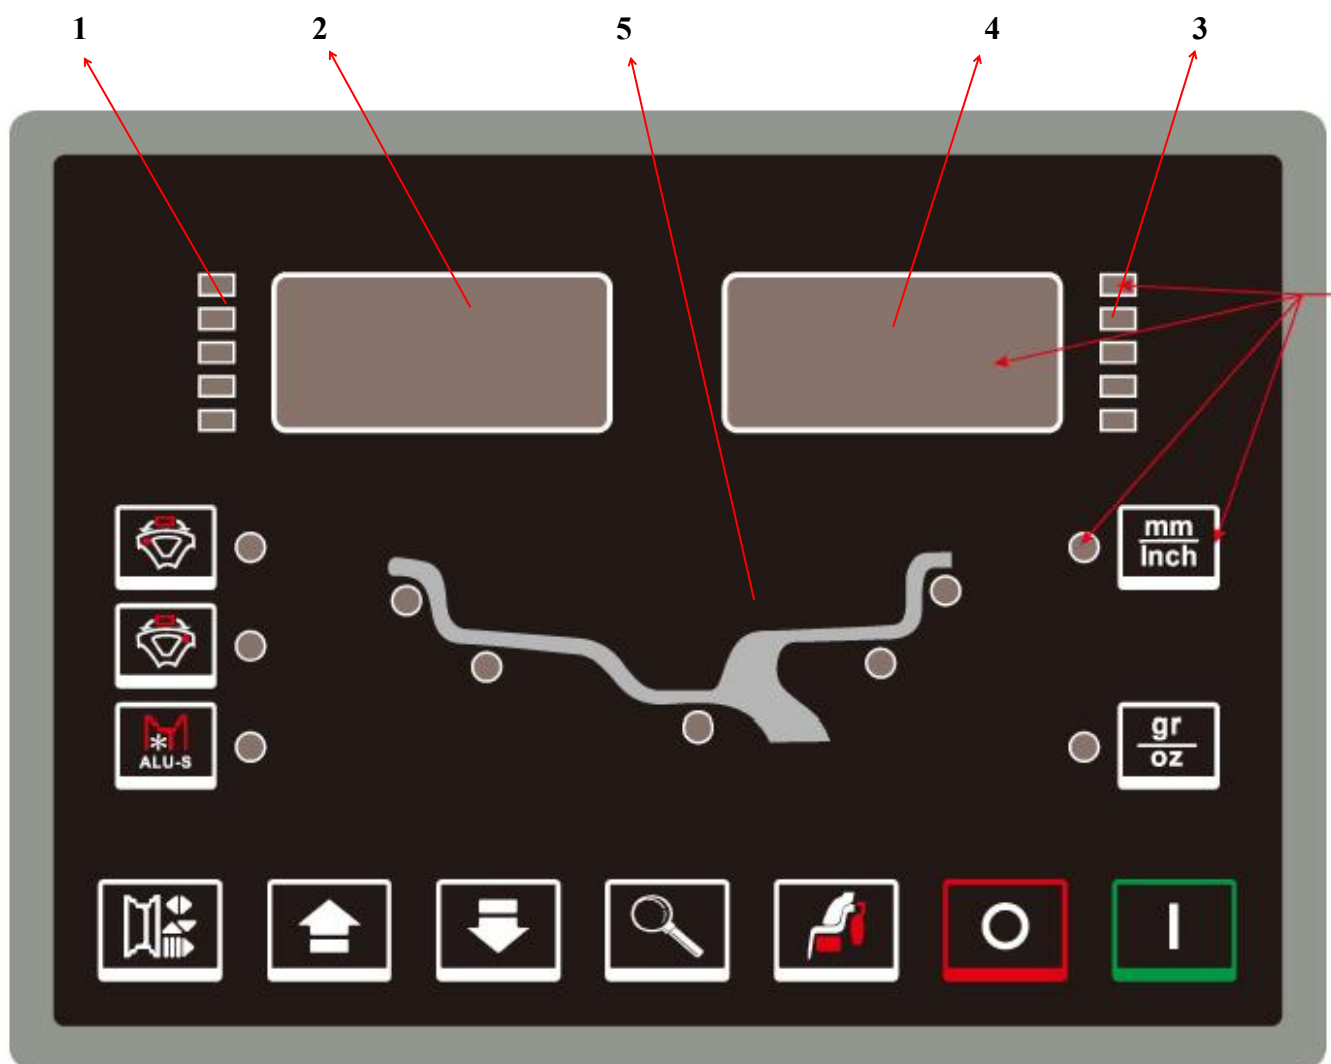








- 1.inside unbalance value digital display
- 2.inside unbalance position display
- 3.outside unbalance value digital display
- 4.outside unbalance position display
- 5.displays showing type of correction chosen.




### Eight balancing modes

| Icon                                                                                                | Balancing mode   | Operation                                                                                                                                                                                 | Add weights                                         |
|-----------------------------------------------------------------------------------------------------|------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------|
| <br><b>DYN</b>   | Standard/Default | <ol style="list-style-type: none"> <li>1. Turn on machine</li> <li>2. Input a,b,d value</li> <li>3. Start spin, after spin stop</li> </ol>                                                | Clip on weights on both sides of rim edge           |
| <br><b>ALU-1</b> | ALU1             | <ol style="list-style-type: none"> <li>1. Turn on machine</li> <li>2. Input a,b,d value</li> <li>3. Press ALU button, indicator lit up</li> <li>4. Start spin, after spin stop</li> </ol> | Add adhesive weights on the rim shoulder both sides |
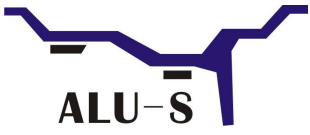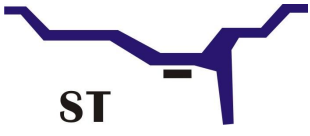
|                                                                                                   |             |                                                                                                                                                                                             |                                                                                |
|---------------------------------------------------------------------------------------------------|-------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------|
| <br><b>ALU-2</b> | ALU2        | <ol style="list-style-type: none"> <li>1. Turn on machine</li> <li>2. Input a,b,d value</li> <li>3. Press ALU button, indicator lit up</li> <li>4. Start spin, after spin stop</li> </ol>   | Clip on weight on inside rim edge, add adhesive weight on outside rim shoulder |
| <br><b>ALU-3</b> | ALU3        | <ol style="list-style-type: none"> <li>1. Turn on machine</li> <li>2. Input a,b,d value</li> <li>3. Press ALU button, indicator lit up</li> <li>4. Start spin, after spin stop</li> </ol>   | Add adhesive weights on the rim shoulder both sides                            |
| <br><b>ALU-4</b> | ALU4        | <ol style="list-style-type: none"> <li>1. Turn on machine</li> <li>2. Input a,b,d value</li> <li>3. Press ALU button, indicator lit up</li> <li>4. Start spin, after spin stop</li> </ol>   | Clip on weight on inside rim edge, add adhesive weight on outside rim shoulder |
| <br><b>ALU-5</b> | ALU5        | <ol style="list-style-type: none"> <li>1. Turn on machine</li> <li>2. Input a,b,d value</li> <li>3. Press ALU button, indicator lit up</li> <li>4. Start spin, after spin stop</li> </ol>   | Add adhesive weight on inside rim shoulder, clip on weight on outside rim edge |
| <br><b>ALU-S</b> | ALUS        | <ol style="list-style-type: none"> <li>1. Turn on machine</li> <li>2. Press ALU button, indicator lit up</li> <li>3. Input aI,aE,d value</li> <li>4. Start spin, after spin stop</li> </ol> | Add adhesive weights on the two positions gauge head touch                     |
| <br><b>ST</b>  | Static mode | <ol style="list-style-type: none"> <li>1. Turn on machine</li> <li>2. Input a,b,d value</li> <li>3. Press ALU button</li> <li>4. Start spin, after spin stop</li> </ol>                     | Add adhesive weight                                                            |

Pay attention to the position of unbalanced lead block according to the setting
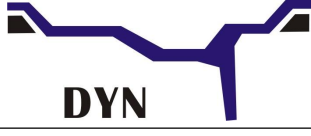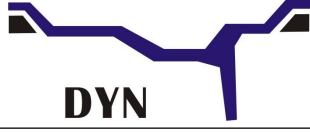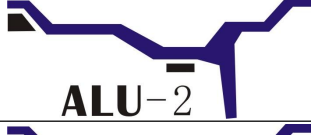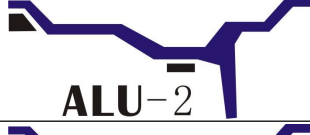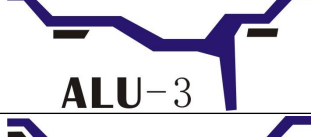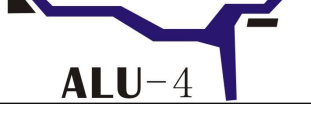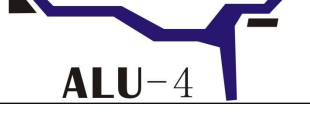
| LAS=OFF    |                                                                                                     |            | LAS=ON     |                                                                                                      |            |
|------------|-----------------------------------------------------------------------------------------------------|------------|------------|------------------------------------------------------------------------------------------------------|------------|
| inside     | Balancing mode                                                                                      | outside    | inside     | Balancing mode                                                                                       | outside    |
| 12 o'clock | <br><b>DYN</b>   | 12 o'clock | 12 o'clock | <br><b>DYN</b>   | 12 o'clock |
| 12 o'clock | <br><b>ALU-1</b> | 12 o'clock | 6 o'clock  | <br><b>ALU-1</b> | 6 o'clock  |
| 12 o'clock | <br><b>ALU-2</b> | 12 o'clock | 12H        | <br><b>ALU-2</b> | 6 o'clock  |
| 12 o'clock | <br><b>ALU-3</b> | 12 o'clock | 6 o'clock  | <br><b>ALU-3</b> | 12 o'clock |
| 12 o'clock | <br><b>ALU-4</b> | 12 o'clock | 12 o'clock | <br><b>ALU-4</b> | 12 o'clock |
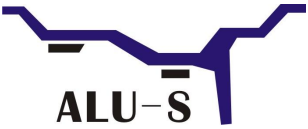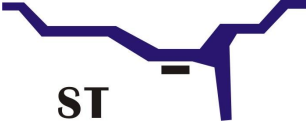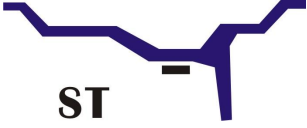
|               |                                                                                   |               |  |               |                                                                                    |               |
|---------------|-----------------------------------------------------------------------------------|---------------|--|---------------|------------------------------------------------------------------------------------|---------------|
| 12<br>o'clock |  | 12<br>o'clock |  | 6<br>o'clock  |  | 12<br>o'clock |
| Gauge<br>head |  | Gauge<br>head |  | 6<br>o'clock  |  | 6<br>o'clock  |
| 12<br>o'clock |  | 12<br>o'clock |  | 12<br>o'clock |  | 12<br>o'clock |

### Key board (H)

| Icon                                                                                | Function           | Icon                                                                                | Function                              |
|-------------------------------------------------------------------------------------|--------------------|-------------------------------------------------------------------------------------|---------------------------------------|
|    | Rim data           |    | Selection of “ALU” modes              |
|   | Data add key       |   | Unbalance display pitch and threshold |
|  | Data reduction key |  | Start                                 |
|  | Stop/Cancel        |                                                                                     |                                       |

### \*Electronic brakes \*

| Icon                                                                                | Function                                                      | Icon                                                                                | Function            |
|-------------------------------------------------------------------------------------|---------------------------------------------------------------|-------------------------------------------------------------------------------------|---------------------|
|  | Automatic brake switch / can be used to load and unload tires |  | Search for location |

## 4. Indication and use of wheel balancer


### 4.1. DYN (Standard/Default) mode

4.1.1. Clean wheel, take off counterweights, check pressure of wheel. Choose the way of installation according to the type of wheel.



Main shaft-wheel—

suitable cone( small head towards inside)—quick handle nut

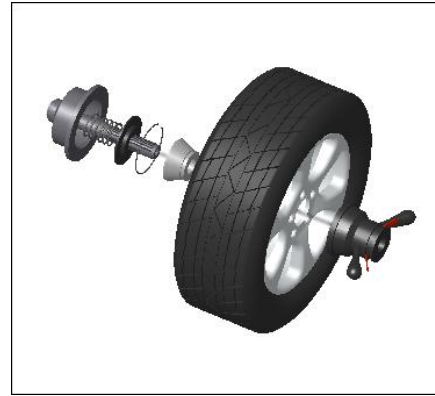

Main shaft-suitable cone(big head towards inside)

—wheel—quick handle nut

**Attention: May add a wheel, and hold the wheel to help install the thread hub. When installing or taking off wheel, do not let wheel move on the shaft, to avoid scratching shaft.**

4.1.2. Turn on machine

4.1.3. Input a b d value

Turn on machine, choose right way to install wheel according to the type of wheel. Set “a” “b” “d” values:

- set “a” value: move the gauge to measuring position as illustrated as Fig.1, hold the gauge still in position for approx. 4 seconds, successful memorization is given, then return the gauge to position

0.(The value measured in automatic mode appear on the display). Or press  and  and  to set manually.

- set “b” value: set nominal diameter “b” marked on the wheel or use the width gauge to measure the value of “b” as Fig.2, then press  and  and  to set manually.

- set “d” value: this value measured in automatic mode same time as “a” value setting, or press  and  and  to set manually.

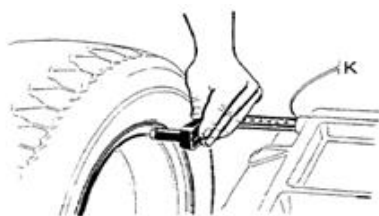


Fig.1



Fig.2

4.1.4. Put down the guard and press  to perform a measuring spin.

4.1.5. In a few seconds the wheel is brought to operating speed and begin measuring unbalance, the unbalance values

remain on instruments 1 and 3 when the wheel stopped. Press



may check the real unbalance value under threshold.

4.1.6. Anticlockwise moving wheel slowly, until the right LED lit up full, clip weight on 12 o'clock position (Fig.3)

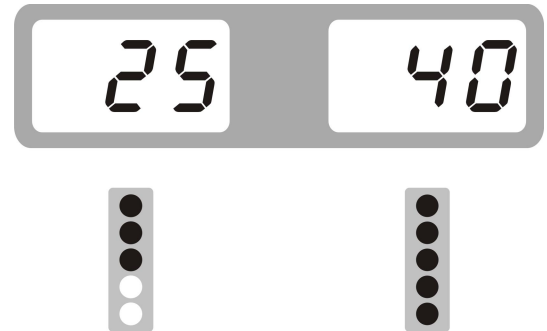
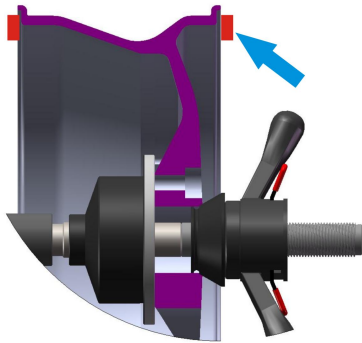


Fig. 3

4.1.7. Anticlockwise moving wheel slowly, until the left LED lit up full, clip weight on 12 o'clock position (Fig.4)


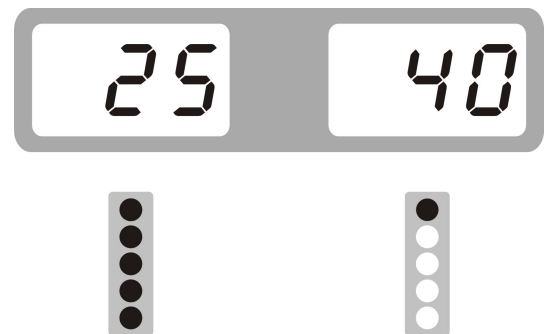


Fig. 4

4.1.8. After finishing clipping the counterweights, put down the guard or press

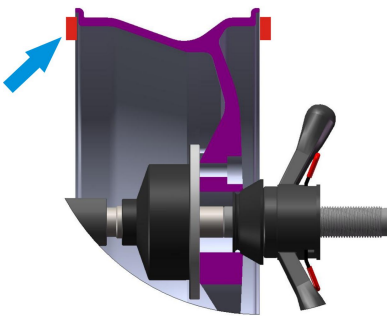

, to perform balancing spin again, if comes out 00 00, means balancing succeed. (Fig.5)



Fig. 5

## 4.2. ALU-1 mode (ALU-1, ALU2 same operation, only the position to add weights different)

4.2.1. Set "a" "d" "b" values



4.2.2. Press until ALU1 indicator lit up



4.2.3. Put down the guard and press to perform a measuring spin.

4.2.4. In a few seconds the wheel is brought to operating speed and begin measuring unbalance, the unbalance values

remain on instruments 1 and 3 when the wheel stopped. Press  may check the real unbalance value under threshold.

4.2.5. Anticlockwise moving wheel slowly, the displays with right LED's lit up full indicate the correct angular position where to mount the counterweights, (las=on,las=off) position outside, as Fig.6, add the counterweight.

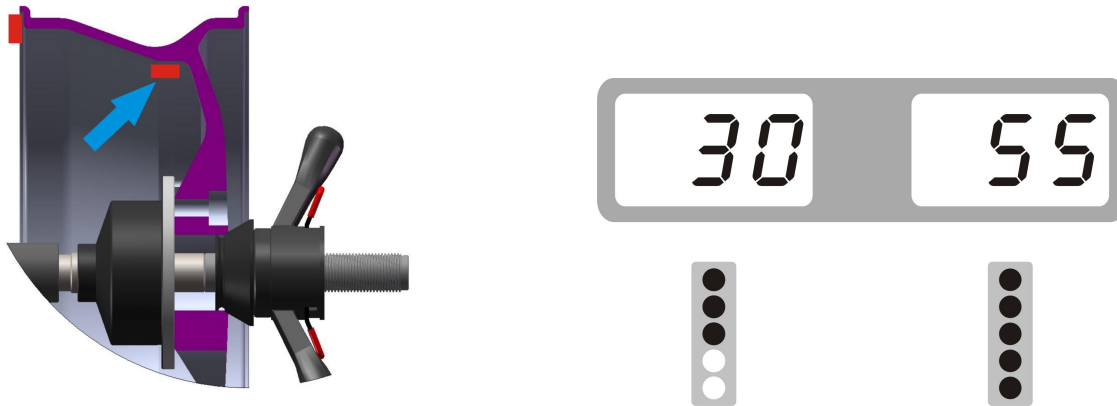


Fig. 6

4.2.6. Anticlockwise moving wheel slowly, the displays with left LED's lit up full indicate the correct angular position where to mount the counterweights, (las=on,las=off) position inside, as Fig.7, add the counterweight.

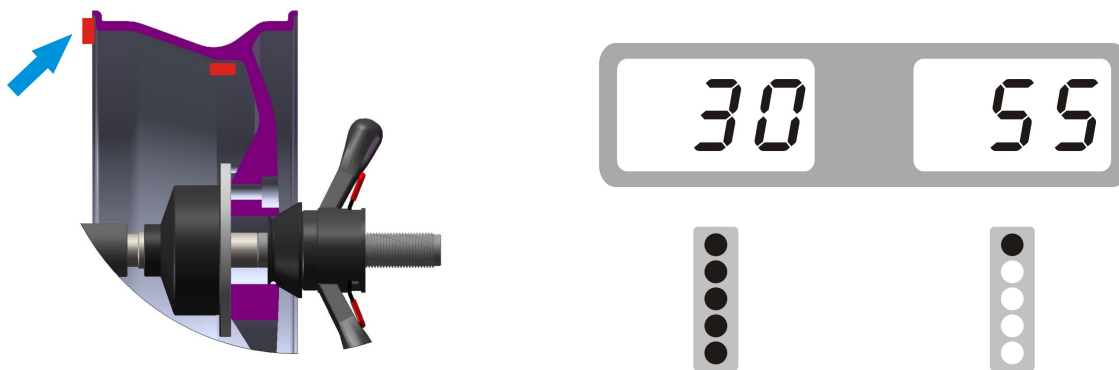


Fig. 7

4.2.7. After finishing mounting the counterweights, put down the guard and press , to perform balancing spin again, if comes out 00 00, means balancing succeed. (Fig.8)



Fig. 8

### 4.3. ALU—S mode

This mode is used for special rim, if ALU1/ALU2 can not be used, you should choose ALUS mode.

Input aI, aE, d value

- Set “aI”: pull gauge out let the gauge head touch the position of FI for 4 seconds, may press  and  and  to change

- Set “aE”: pull gauge out let the gauge head touch the position of FE for 4 seconds , may press  and 

and  to change

- Set “dI”: read from rim, may press  and  and  to change
- Set “dE”: read from rim, may press  and  and  to change

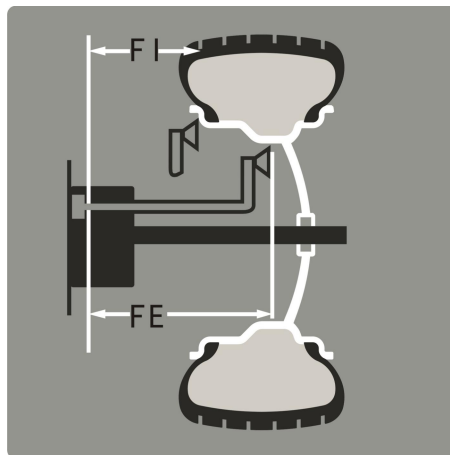


Fig. 9

Put down the guard and press  to perform a measuring spin.

4.3.1. 6 o'clock position to add weight

Set (las=on) according to 10.1

Anticlockwise moving wheel slowly, until the right LED lit up full, add weight on 6 o'clock position (Fig.10)

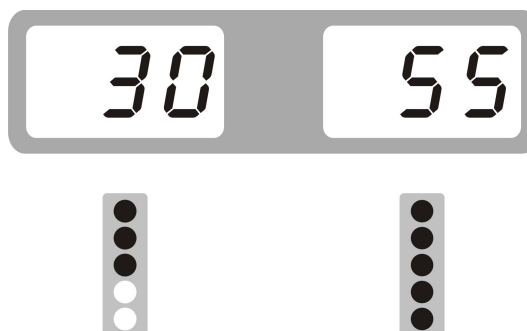
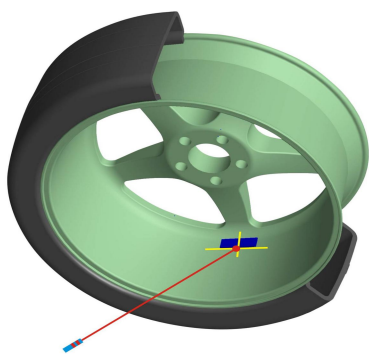


Fig. 10

Anticlockwise moving wheel slowly, until the left LED lit up full, add weight on 6 o'clock position (Fig.11)

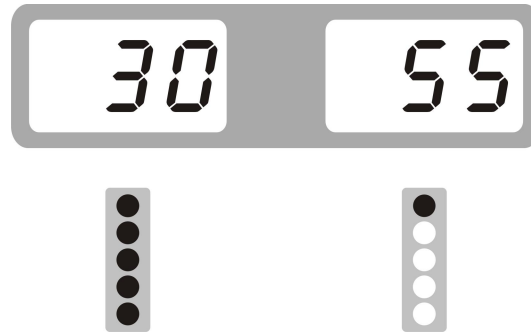
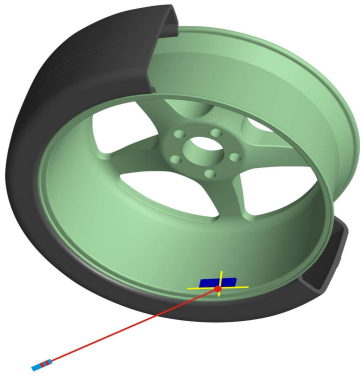


Fig. 11

After finishing mounting the counterweights, put down the guard and press , to perform balancing spin again, if comes out 00 00, means balancing succeed. (Fig.12)



Fig. 12

#### 4.3.2. Use gauge head to add weight

Set (las=off) according to 10.1

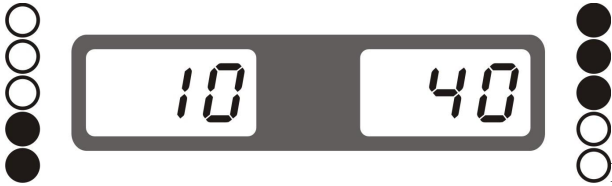


Fig. 13

Anticlockwise moving wheel slowly, until the right LED lit up full (Fig.14)

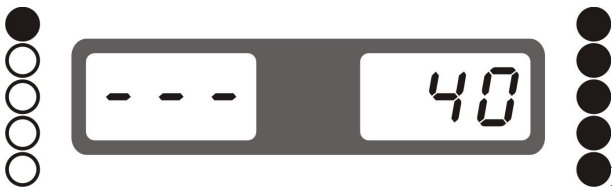


Fig. 14

Take off proper counterweight to be hold by the gauge head as Fig. 16

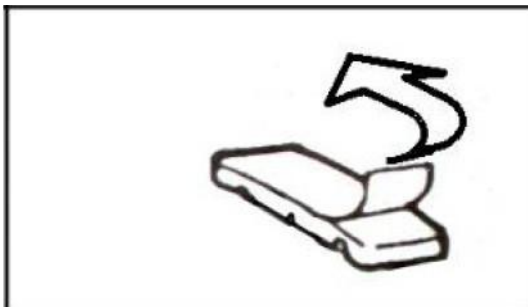


Fig. 15


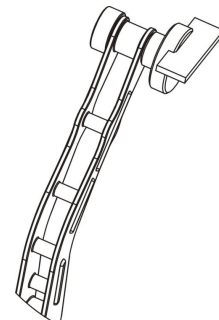


Fig. 16


Pull out gauge until there is a square comes in the middle window (Fig. 17)



Release the counterweight and let it stick on rim (Fig. 18)

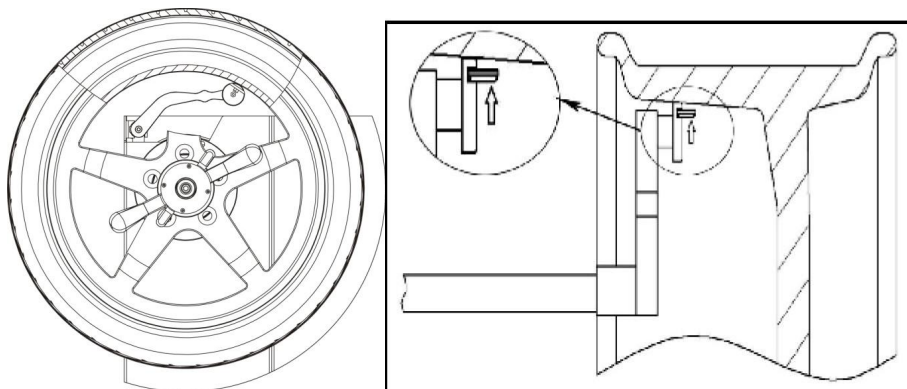

Anticlockwise moving wheel slowly, until the left LED lit up full (Fig.19)

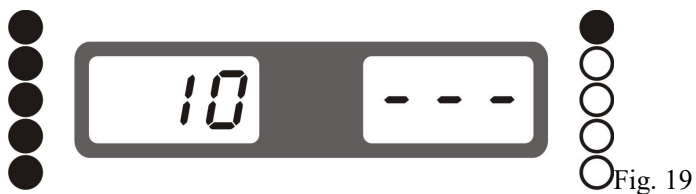

Take off proper counterweight to be hold by the gauge head as Fig. 16

Pull out gauge until there is a square comes in the middle window (Fig. 20)



Release the counterweight and let it stick on rim (Fig. 21)

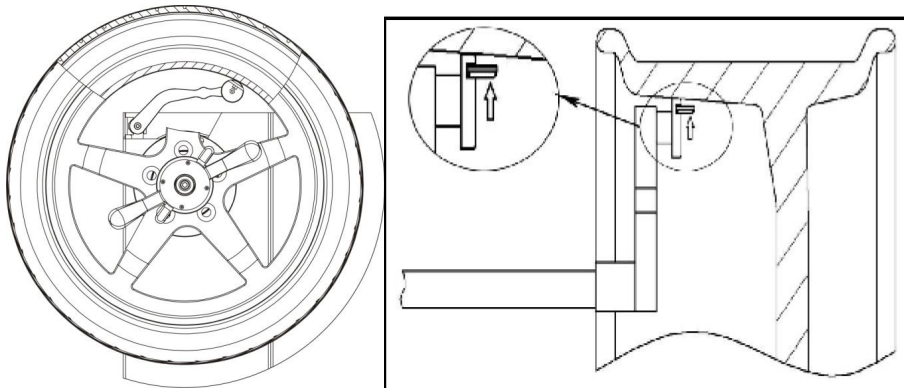


Fig. 21

Then turn down safe guard and press  to start spin, comes Fig. 22 means the wheel is balanced.



Fig. 22

### 3.4 ALUS split function

**Note: Only ALU-S mode can use this function. And Operator must be experienced.**

|                      |                                                                                                                                                                                                                                                                                                               |        |                                                                                       |
|----------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|---------------------------------------------------------------------------------------|
| 1                    | In the case of the ALU-S mode, press                                                                                                                                                                                       | comes> |  |
| 2                    | Through the  and  input wheel number,<br>then press  | comes> |  |
| 3                    | Keep the next spock( either direction is ok) on the position<br>of (las=on,las=off) press                                                                                                                                  | comes> |  |
| 4                    | Anticlockwise rotate wheel by hand slowly, until the<br>outside SP1 LED lit up full, add the adhesive weight (to<br>stick the weights on position of (las=on,las=off)                                                                                                                                         | comes> |  |
| 5                    | Anticlockwise rotate wheel by hand slowly, until the<br>outside SP2 LED lit up full, add the adhesive weight (to<br>stick the weights on position of (las=on,las=off)                                                                                                                                         | comes> |  |
| 6                    | Put down safe guard and press  , after spin stop                                                                                                                                                                           |        |  |
| Successful operation |                                                                                                                                                                                                                                                                                                               |        |                                                                                       |

## 5. Self-calibration of wheel balancer



### 5.1. Self-calibration of wheel balancer


5.2. Turn on balancer, install a medium size wheel (14"-18") which can use clip-on weight, set "a b d" value, then

**Do the self-calibration whenever you think the balancer is not accurate. The 100g weight must be accurate.**


|                           |                                                                                                                                                                                                                                   |       |                                                                                     |
|---------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------|-------------------------------------------------------------------------------------|
| Step 1                    | Press  and hold, then press                                     | comes |  |
| Step 2                    | Put down safe guard or press  start spin, after spin stop                                                                                        | comes |  |
| Step 3                    | Open the safe guard and clip a 100 gram weight on the outside 12 o'clock position, put down safe guard and press  to start spin, after spin stop | comes |  |
| Step 4                    | Open the safe guard and clip a 100 gram weight on the inside 12 o'clock position, put down safe guard and press  to start spin, after spin stop  | comes |  |
| self-calibration finished |                                                                                                                                                                                                                                   |       |                                                                                     |

## 6. Rim distance and diameter gauge calibration (If provided)
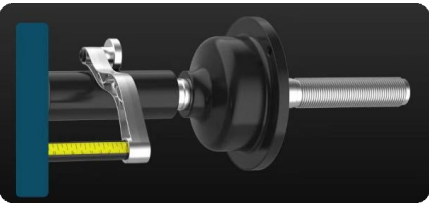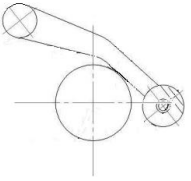
|                                                                                                                                                                                                                      |         |                                                                                       |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------|---------------------------------------------------------------------------------------|
|  +                                             | comes > |  |
| pull gauge to position "0" and hold, press                                                                                        | comes > |  |
| pull gauge to position "15" and hold, press                                                                                       | comes > | <b>CAL Adl</b>                                                                        |
| <div>   </div> <p>Step 1.</p>                 |         |                                                                                       |
| Turn the scale, let it on the main shaft, press the  key to confirm the step 1.                                                   | comes > |  |
| Set "d" by press  and  , (for example if it is | comes > |  |


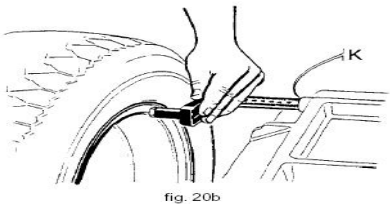
|                                                                                                                                         |   |                                                                                           |
|-----------------------------------------------------------------------------------------------------------------------------------------|---|-------------------------------------------------------------------------------------------|
| 16 inch, make it 16)                                                                                                                    |   |                                                                                           |
| move gauge to touch the edge of rim and keep still<br> | > | press  |
| comes>                                                                                                                                  |   |        |
| self-calibration finished                                                                                                               |   |                                                                                           |

## 7. 1 Width gauge calibration (If provided)
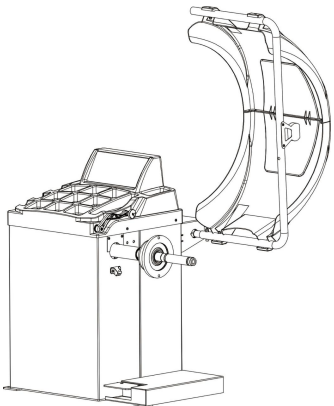
|                                  |                                                                                     |              |                                                                                       |
|----------------------------------|-------------------------------------------------------------------------------------|--------------|---------------------------------------------------------------------------------------|
| 1                                |   | comes>       |   |
| 2                                |  | explain<br>> | Keep the shield in position                                                           |
| 3                                | Auto complete                                                                       | comes>       |  |
| Width gauge calibration finished |                                                                                     |              |                                                                                       |

## 7.2 width compensation

Tire installation required note (known tire width)
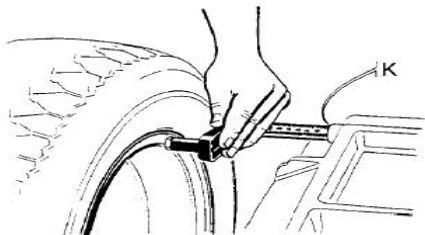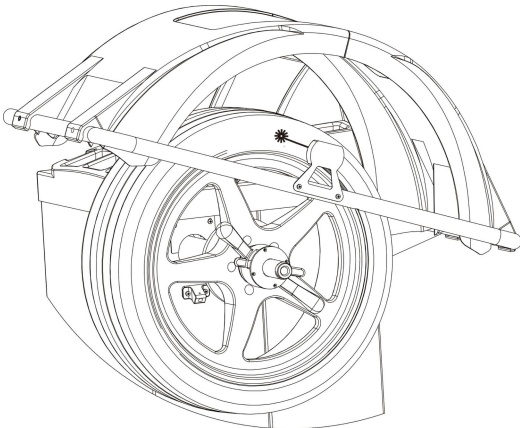
|                                        |                                                                                    |              |                                                                                                                                                                                                                                                                                                                        |
|----------------------------------------|------------------------------------------------------------------------------------|--------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1                                      | A value must be entered                                                            | explain<br>> | <br>fig. 20b                                                                                                                                                                                                                        |
| 2                                      | We're aiming the radar at the tires                                                | explain<br>> |                                                                                                                                                                                                                                      |
| 3                                      |  | explain<br>> | Press  +  or  at the same time to modify the known tire width |
| Put down the key to save automatically |                                                                                    |              |                                                                                                                                                                                                                                                                                                                        |

## 8. Errors

Various abnormal conditions can arise during machined operation by the microprocessor, if comes the errors, must stop operation, find the reason and the solution according, if the error persists, consult the supplier.

| No. | Errors                                                                              | Reasons                                                                      | Solution                                                                                                                                                        |
|-----|-------------------------------------------------------------------------------------|------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1   |  | 1. No spin<br>2. Shaft spin                                                  | 1. If no spin, check or change power board<br>2. If spin, check or change position pick up board and computer board<br>3. Adjust position pick up board support |
| 2   |  | 1. No wheel or wheel not locked tightly<br>2. Position pick up board problem | 1. Lock tightly<br>2. check or change position pick up board                                                                                                    |
| 3   |  | 1. No enough pressure in wheel<br>2. Wheel distortion                        | 1. Add proper pressure in wheel<br>2. Check wheel                                                                                                               |

|    |                                                                                     |                                                                                                      |                                                                                         |
|----|-------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------|
| 4  |    | 1.Position pick up board problem<br>2. Computer board problem                                        | 1.Check or change position pick up board<br>2.Check or change computer board            |
| 5  |    | 1. Micro switch problem<br>2. Computer board problem                                                 | 1.Check or change Micro switch<br>2.Check or change computer board                      |
| 6  |    | 1. Power board problem<br>2. Computer board problem                                                  | 1.Check or change power board<br>2.Check or change computer board                       |
| 7  |    | 1. Program lost<br>2. Computer board problem                                                         | 1.Self calibration<br>2. Check or change computer board                                 |
| 8  |    | 1. No add 100g weight during self calibration<br>2. Computer board problem<br>3. Power board problem | 1. Add 100g weight<br>2.Check or change computer board<br>3.Check or change power board |
| 9  |   | 1. Micro switch problem<br>2. Computer board problem                                                 | 1.Check or change micro switch<br>2.Check or change computer board                      |
| 10 |  | 1. Computer board problem<br>2. Power board problem                                                  | 1.Check or change computer board<br>2.Check or change Power board                       |

## 9. Self- diagnoses

Press  and hold, then press  goest to self diagnoses, press  to next , press  to escape

| Order | Display                                                                             | Function               | Function normal                                                            |
|-------|-------------------------------------------------------------------------------------|------------------------|----------------------------------------------------------------------------|
| 1     |  | Display                | All lit up                                                                 |
| 2     |  | Position pick up board | POS changes in 0-127                                                       |
| 3     |  | Distance potentiometer | Left window data is 327-340, when pull gauge out, the data changes         |
| 4     |  | Diameter potentiometer | left window data is 327-340, turn ruler to another direction, data changes |
| 5     |  | Width potentiometer    | left window data is 0-600, Cover the sensor with your hand                 |

|   |  |                 |                                                   |
|---|--|-----------------|---------------------------------------------------|
| 6 |  | Pressure sensor | Use hand to press main shaft, 4X-4X 6X-6X changes |
|---|--|-----------------|---------------------------------------------------|

## 10. Setting machine

### 10.1. Machine setting





Press and hold, then press goes to set machine, press and to change, press to next

| Order | Display | function                    | choice                                                                                           |
|-------|---------|-----------------------------|--------------------------------------------------------------------------------------------------|
| 1     |         | Unbalance display threshold | 5/10/15                                                                                          |
| 2     |         | Sound                       | On/off                                                                                           |
| 3     |         | Light                       | 1-8                                                                                              |
| 4     |         | Laser switch                | OFF: 12 o'clock<br>ON: Laser switch                                                              |
| 5     |         | Tire weight                 | On/off                                                                                           |
|       |         | inch /mm                    | ON:inch<br>OFF:mm                                                                                |
| 6     |         | Safe guard                  | ON: Put down safe guard to start spin<br>OFF: Put down safe guard then press start to start spin |
|       |         | Unit of weight              | Gram/ Ounce                                                                                      |
| 8     |         | Tire type operation         | CAR: car Boot display [CAR]<br>Sco: Motorcycle Boot display [Sco]                                |

## 11. OPT function

**Note: When unbalance value is too much, choose OPT, and operator must be experienced.**

Install wheel, input a b d value
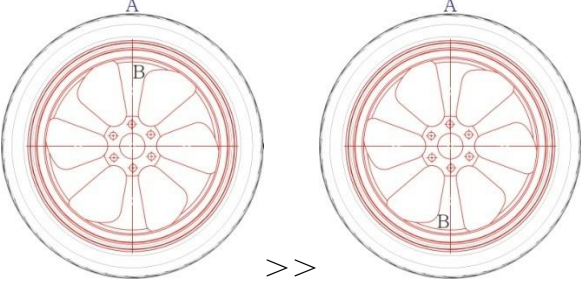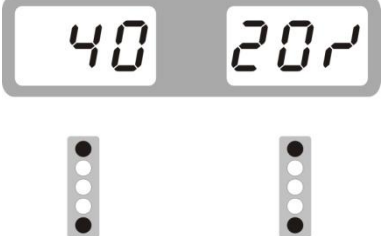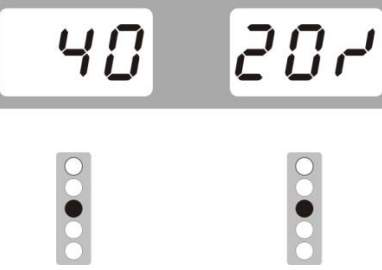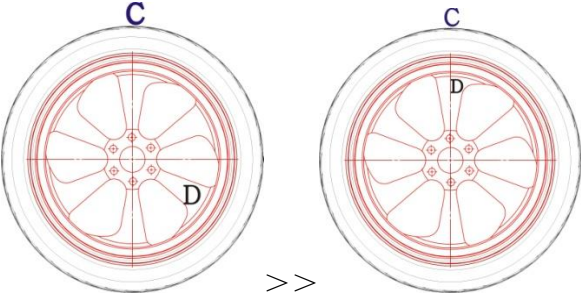
|   |                                                                                                                                                                             |                |                                                                                       |
|---|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------|---------------------------------------------------------------------------------------|
| 1 | Press  +  | comes >        |    |
| 2 | Put down safe guard and press                                                              | comes >        |    |
| 3 | With the help of tire changer, change the rim and rubber 180 degree                                                                                                         | reference<br>> |     |
| 4 | Then put down safe guard and press                                                         | comes >        |    |
| 5 | Rotate wheel until four indicators lit up (two on both sides, the dark spot in the right side picture), mark the position C with chalk on rubber                            | reference<br>> |   |
| 6 | Rotate wheel until two indicators lit up (one on both sides, the dark spot in the right side picture), mark the position D with chalk on rim                                | reference<br>> |  |
| 7 | With the help of tire changer, change the rim and rubber to make C and D match                                                                                              | reference<br>> |   |
| 8 | Put down safe guard and press                                                            | comes >        | If unbalance is less than before, OPT succeed                                         |

## 12. Spare parts list and Exploded drawings

---